


SPEKURA

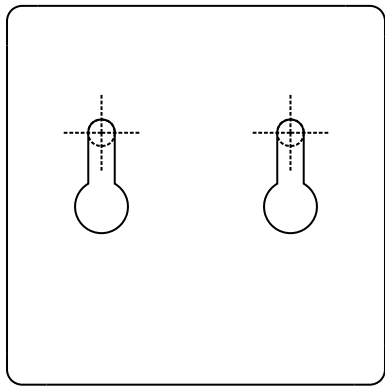

Installation instructions:

Position template and align with the horizontal line using a level. Tape in place.

Mark crosshairs using a pushpin or center punch.

Drill holes using a 3/16" bit.

Insert anchors flush to wall.

Install screws, leaving heads slightly raised.

Place mount onto screws and test for a secure, flush fit.

Adjust screw depth until mount sits flat with slight resistance, then remove mount.

Press HomePod mini onto the mount, aligning cable with rear channel.

Route cable fully into channel.

Hang assembly onto screws.